www.cimon.com

CIMON PC SERIES

CIMON-NP Series

User Manual

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS : (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

⚠ Caution

To use this product correctly, it is absolutely required to read the product descriptions before use.

1. For your safety and the safe operation of this product, please read this manual before using the product. The manual is subject to change without notice.
2. Please review the product specification in this manual to determine the suitability of this product for its intended use.
3. For your safety only qualified persons should perform electrical and wiring attachments to this product.

FCC RF
INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

MEMO

CONTENTS

Essential Safety Precautions 05
General Safety Precautions 07
Package Contents 08
1. Dimensions 09
2. Interface 11
3. Installation 14
4. Wiring & Power Supply Caution 16
5. Grounding Caution 16
6. Specification 17
7. Environmental Specifications 18
8. EWF: Enhanced Write Filter 19
9. Calibration Setting 20
10. Multi-Monitor Setting 22
Products Warranty 25
MEMO

Essential Safety Precautions

⚠ WARNING

Installation

- Please do not disassemble or modify the PC. It will void the Warranty and may cause a high voltage electric shock.
- This version of the PC is not rated for flammable environments. Do not use this panel around flammable gases.

Wiring

- To prevent an electric shock, confirm that the power supply is turned-off before making any connection to the PC.
- Do not use power beyond the specified voltage range of the PC.
- Doing so may cause a fire or an electric shock.

Maintenance

- The PC uses a lithium battery to back up the internal clock. Do not replace this battery yourself because it may cause an explosion. If the battery needs to be replaced, please contact your local service center.

⚠CAUTIONS

Installation

- Be sure to securely connect all cable connectors to the PC. A loose connection may cause incorrect input or output.

Wiring

- Field Ground (FG) wires must be run individually from each unit to the master grounding terminal. DO NOT daisy chain the FG wires between devices.
- Correctly wire the panel, be sure that the rated voltage and terminal layout are within the designated range. If the voltage supplied differs from the rated voltage, or incorrect wiring or grounding is performed, it may cause a fire or unit malfunction and it will void the warranty.
- Use only the designated torque to tighten terminal block screws of the panel. If these screws are not tightened firmly, it may cause a short circuit, fire or panel malfunction.
- Be careful that metal filings and wiring debris do not fall into the PC, they can cause a fire, panel malfunction or incorrect operation.

Unit Disposal

- When this unit is disposed of, it should be done so according to your country's regulation for similar types of industrial waste.

General Safety Precautions

- Do not strike the touch panel with a hard or pointed object, or press on the touch panel with too much force, since it may damage the touch panel or the display.
- Do not install the PC where the ambient temperature can exceed the allowed range. Doing so may cause the PC to malfunction or shorten its operation life.
- Do not restrict or limit naturally occurring rear-face ventilation of the PC, or storing or using the PC in an environment that is too hot.
- Do not use the PC in areas where large, sudden temperature changes can occur. These changes can cause condensation to form inside the unit, possibly causing the unit to malfunction.
- Do not allow water, liquids, metal or charged particles to enter inside the PC, since they can cause either a PC malfunction or an electrical shock.
- Do not store or use the PC in direct sunlight, or in excessively dusty or dirty environments.
- Do not store or use the PC where strong jolting or excessive vibration can occur.
- Do not store or use the PC where chemicals (such as organic solvents, etc.) and acids can evaporate, or where chemicals and acids are present in the air.
- Do not use paint thinner or organic solvents to clean the PC.
- After turning the PC OFF, be sure to wait 20 seconds before turning it ON again. If the PC started too soon, it may not start up correctly.

Package Contents

The following items are contained in the package of the PC Series. Before using the PC Series, please confirm that all items listed here are present.

▪ PC

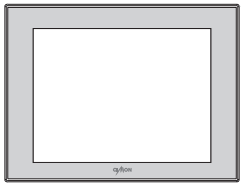

▪ Fastener

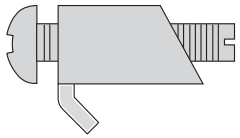

▪ 3P Connector

▪ 5P Connector

▪ Installation Guide

This unit has been carefully packed, with special attention to quality. However, should you find anything damaged or missing, please contact your local Cimon distributor immediately.

1. Dimensions

Unit : mm

● **NP12**

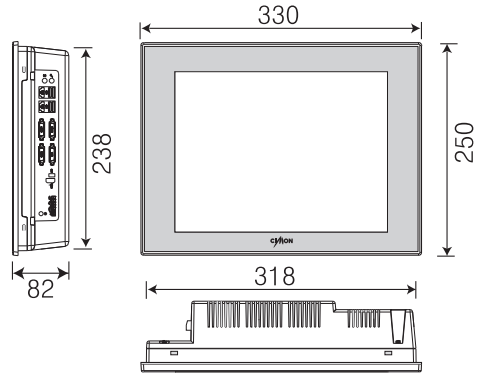

● **NP15**

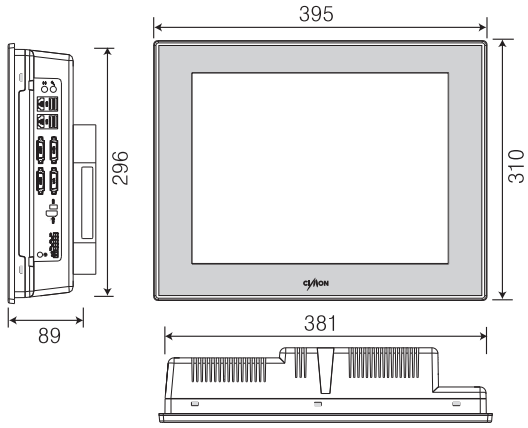

Unit : mm

- **NP19**

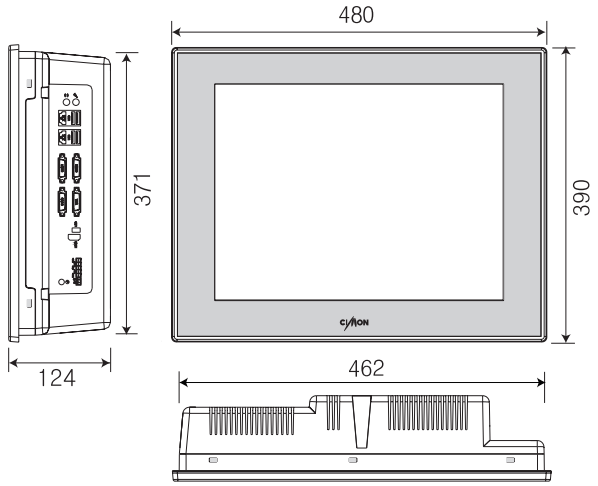

2. Interfaces

▪ Outline

▪ NP 12/ 15/ 19



▪ COM1 / COM2 / COM3 : RS-232C

This interface is used to connect the PC to the host (PLC) via an RS-232C cable. Connector of RS-485/422 does not work with this COM1 port.

Connector	Pin No.	Name	Description
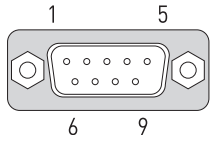	1	DCD	Data Carrier Detect
	2	RD	Receive Data
	3	TD	Transmit Data
	4	DTR	Data Terminal Ready
	5	SG	Signal Ground
	6	DSR	Data Set Ready
	7	RTS	Request To Send
	8	CTS	Clear To Send
	9	RI	Ring Indicator

▪ COM4: RS-422/485

This interface is used to connect the PC to the host (PLC) via an RS-422/485 cable.

Connector	Pin No.	Name	Description
	1	TXD+	Transmit Data +
	2	TXD-	Transmit Data -
	3	GND	Ground
	4	RXD+	Receive Data +
	5	RXD-	Receive Data -

Switch setting for RS-485 and RS-422

Type	Switch
RS-485	
RS-422	

- In case of RS-485 connection, connect both TXD+ and TXD-.
- The RS-485 of the PC runs under auto toggle mode.
- To reduce the risk of damaging the RS-422 circuit, be sure to connect the GND terminal.

▪ Ethernet

▪ This interface complies with the IEEE802.3 for Ethernet (10Base-T / 100Base-TX / 1000Base-T).

RJ45 Connector	RJ45 Jack
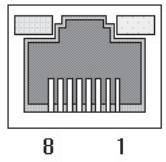	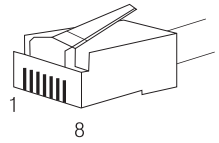

Direct Cable : Host ↔ HUB

Cable	No	Color	Color	No	Cable
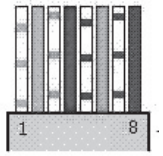	1	Orange/W	Orange/W	1	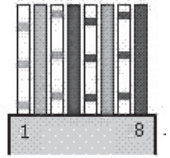
	2	Orange	Orange	2	
	3	Green/W	Green/W	3	
	4	Blue	Blue	4	
	5	Blue/W	Blue/W	5	
	6	Green	Green	6	
	7	Brown/W	Brown/W	7	
	8	Brown	Brown	8	

Crossover Cable : Host ↔ Host

Cable	No	Color	Color	No	Cable
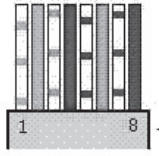	1	Orange/W	Green/W	1	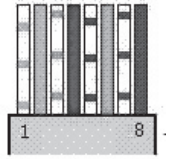
	2	Orange	Green	2	
	3	Green/W	Orange/W	3	
	4	Blue	Blue	4	
	5	Blue/W	Blue/W	5	
	6	Green	Orange	6	
	7	Brown/W	Brown/W	7	
	8	Brown	Brown	8	

Unit : mm

• **NP12**

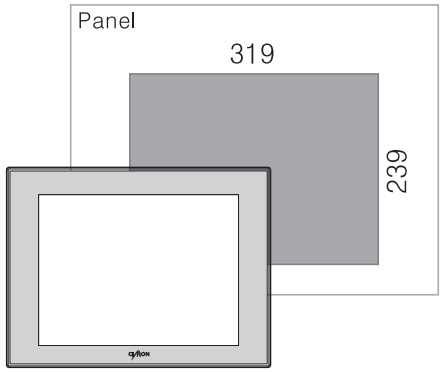

• **NP15**

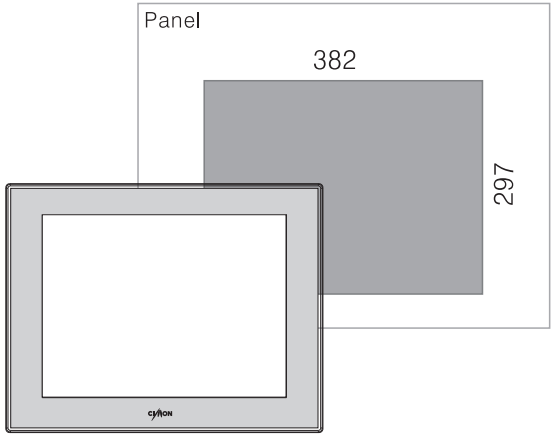

Unit : mm

• **NP19**

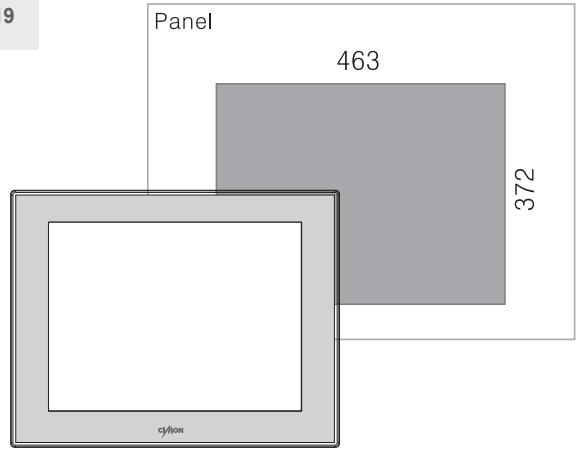

▪ Attach the Installation Fasteners from inside the panel
Insert each the hook of faster into slot and tighten it with a screwdriver.

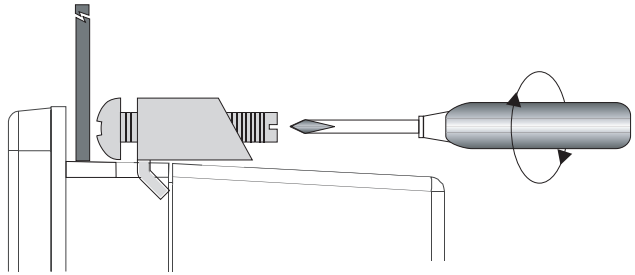

- Tightening the screws with too much force can damage the case of the PC.
- The necessary torque is 0.5 N•m.
- Depending on the thickness of installation panel, the number of installation fasteners used may need to be increased to provide the desired level of moisture resistance.

4. Wiring and Power Supply Caution

⚠WARNING

- To avoid an electric shock, when connecting the PC power cord terminals to the power terminal block, confirm that the PC power supply is completely turned OFF, via a breaker, or similar unit.
- Since there is no power switch on the PC unit, be sure to attach a breaker-type switch to its power cord.
- If the power supply voltage exceeds the GP's specified range, connect a voltage transformer.
- Between the line and the ground, be sure to use a low noise power supply. If there is still an excessive amount of noise, connect a noise reducing transformer.
- The power supply cord should not be bundled with or kept close to main circuit lines (high voltage, high current), or input/output signal lines.
- Connect a surge absorber to handle power surges.
- To reduce noise, make the power cord as short as possible.

5. Grounding Caution

- When grounding to the rear face FG terminal of the PC, (on the Power Input Terminal Block), be sure to create an exclusive ground.
- Inside the PC unit, the SG (Signal Ground) and FG (Frame Ground) terminals are connected to each other.
- When connecting an external device to the PC with the SG terminal, ensure that no short-circuit loop is created when you setup the system.

6. Specification

Specification	NP12	NP15	NP19
DISPLAY	TFT COLOR LCD		
SIZE	12"	15"	19"
RESOLUTION	XGA (1024 X 768)		SXGA (1280 X 1024)
COLOR	16,700,000		
CPU	Intel Baytrail-I Embedded Processor E3845 Quad Core 1.91GHz		
TOUCH	Analog Resistive		
MEMORY	DDR3 SDRAM 2CH. 4GB~8GB 1333MT/s (Default : 4GB, 2CH)		
STORAGE	mSATA SSD 128 GByte		
GRAPHIC	Integrated Intel HD Graphic		
BLU	LED		
LCD BRIGHTNESS	700cd/m^2	450cd/m^2	250cd/m^2
EX. STORAGE	SATA X 1 (120GB)		
SERIAL (COM1, COM2, COM3)	RS232C		
SERIAL (COM 4)	RS422 / 485		
ETHERNET	Gigabit Ethernet, RJ-45 / 2 Port		
USB	USB 2.0 / 4 Port		USB 2.0 / 6 Port (Front 2 Port)
SOUND	Line Out / 1 Port , Mic In / 1 Port		
OS (Selectable)	Windows Embedded Standard 8.1 Industry Pro Windows Embedded Standard 7P Windows 7 Professional (DSP)		
UTILITY PROGRAM	EWF / Winclon (Recovery System)		
ACTIVE CONSUMED ELECTRIC POWER	TBD		
POWER INPUT	AC 100~240V (40.8W)		

7. Environmental Specifications

Item	Specification
Energy consumption	30W or less
Ambient temperature	0℃~ 50℃
Storage temperature	-20℃~ 60℃
Ambient humidity	10%RH~85%RH(below 29℃, No dew condensation)
Storage humidity	10%RH~85%RH(below 39℃, No dew condensation)
Environment condition	800hPa~1114hPa(2000m or less)
Dust	0.1mg/m^3 or less
Pollution degree	Pollution degree 2
Corrosion gas	None
Vibration resistance	SSD storage type 9.8m/S^2, 10Hz~25Hz in X,Y,Z (80min)
Noise resistance	Impulse, EFT/Burse, Surge, ±2KV, 1uS
Static discharge resistance	4kV(IEC61000-4-2 LEVEL 3)

8. EWF: Enhanced Write Filter

Model	NT/NP series, NU series
Applied OS	Windows Embedded Standard 7P
	Windows Embedded 8.1 Industry Pro

The C: Drive of TOUCH/PPC series are protected by EWF. It is part of Windows Embedded which stores volume changes on another medium instead of applying them to the original volume.

- When you change the settings of Windows, install program or write files in C: drive, those will be stored in RAM temporarily.
- When TOUCH/PPC series are rebooted, all data in the C: drive will be removed and restored to previous status.
- In order to enable and disable EWF, click “Start” and run  XWFWin as administrator.

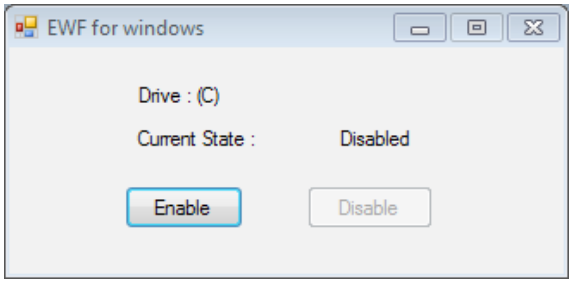

- If you click [Enable], PC will reboot and EWF will be enabled.
- If you click [Disable], PC will reboot and EWF will be disabled.
- In case of Windows Embedded 7, EWF will be disabled without reboot.

9. Calibration Setting

"PenMount Control Panel" is used to calibrate your touch screen in Windows 7 and 8.1.

1.Click "Start" a "PenMount Windows Universal Driver" a "Utility" a " PenMount Control Panel" or click "PenMount Control Panel" icon in the Taskbar.

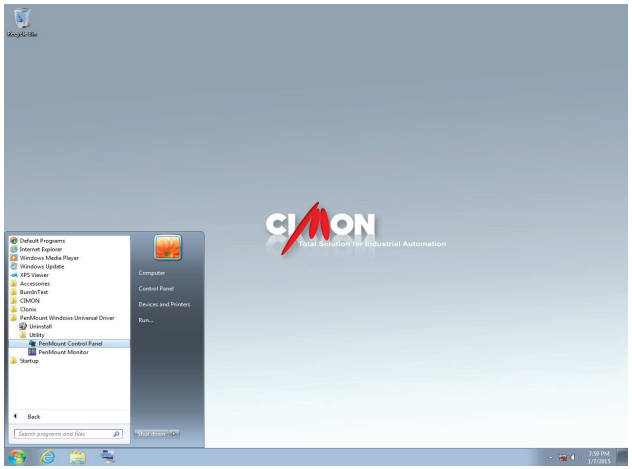

2. Double click "PenMount 6000 USB"

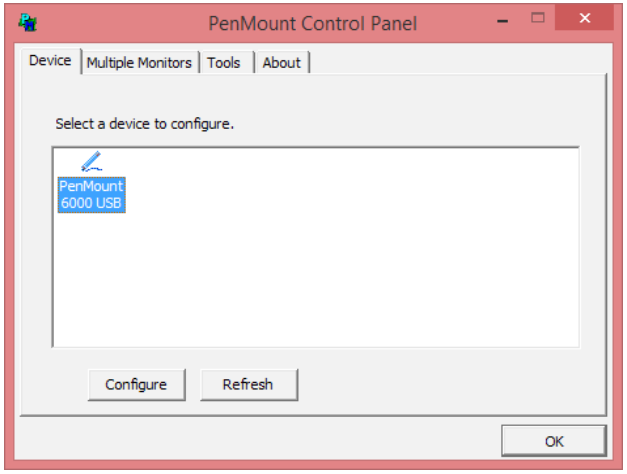

3. Click "Standard Calibration" to start calibration.

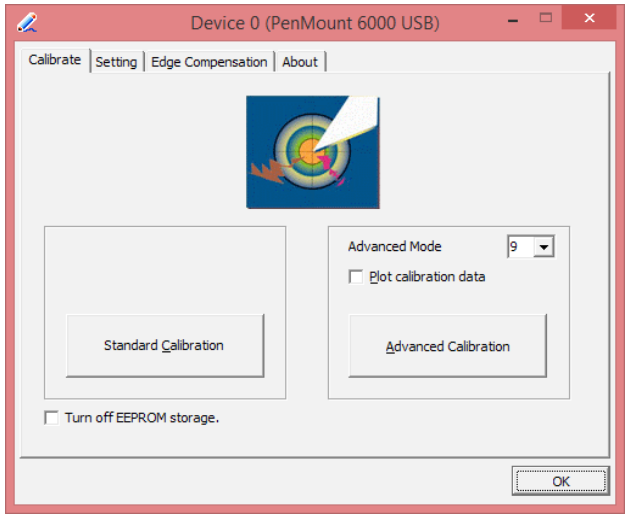

4. The Red point pops up on the top left corner.
Touch the screen with pen and hold for a while to move next red point.

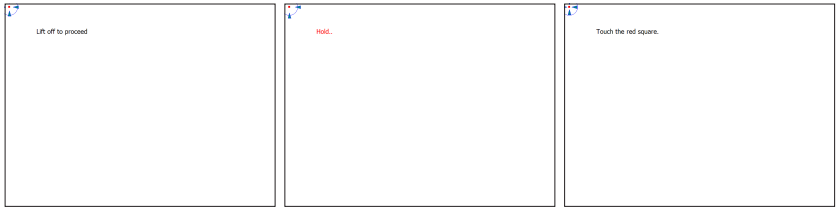

Keep tapping the red point as instruction on the screen.

5. When the process is completed, click "OK" to save calibration setting.
6. Turn off the PC and turn it back on.

After the PC restarts, the calibration is complete.

10. Multi-Monitor Setting

If another monitor is used with the PC, user must set up “Extended Desktop” as following steps.

1.Click right button of mouse on the desktop screen.
Click “Graphics Options”→“Output To”→ “Extended Desktop”→ “Built-in Display + Digital Television”

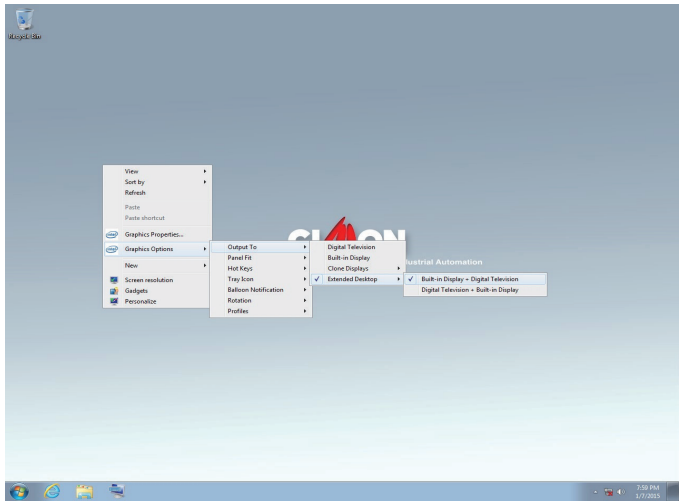

2.Open “PenMount Control Panel”
Click “Start” → “PenMount Windows Universal Driver” → “Utility” → “PenMount Control Panel”

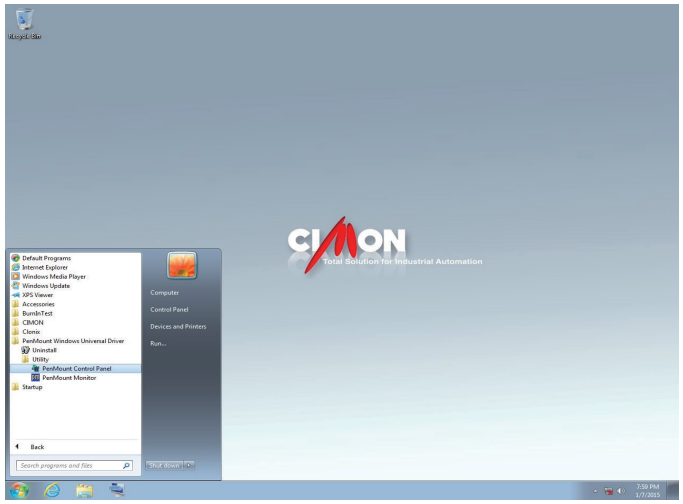

3.Click [Multiple Monitors] and then click “Multiple Monitor Support” and “Map Touch Screens”

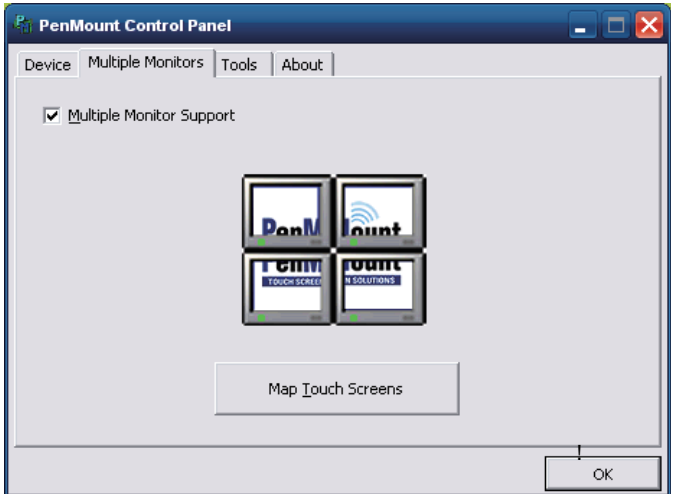

4.Click "OK" to move next step.

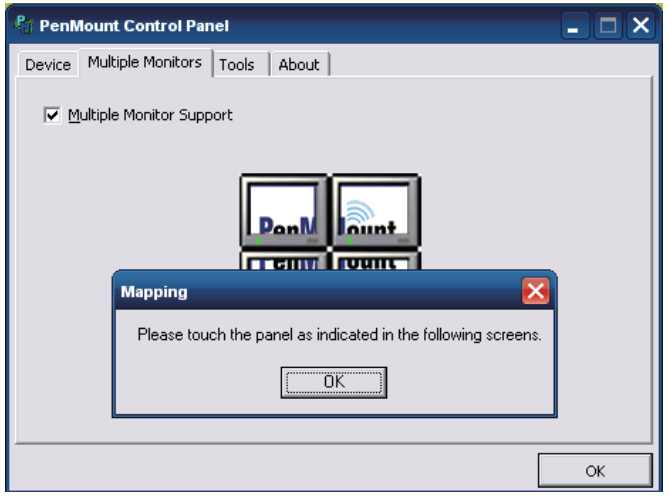

5.If message “Please touch this monitor. Press ‘S’ to skip” pops up on the NP or NT monitor, tap the screen. Press ‘S’ if this message pops up on the extended monitor.

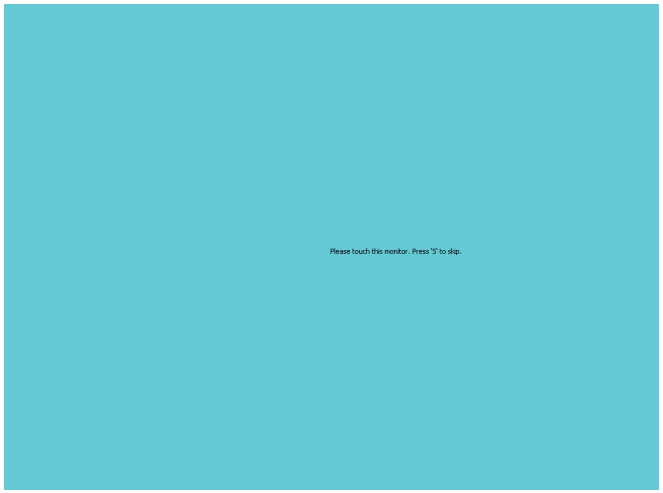

6.Click "OK" to save setting.

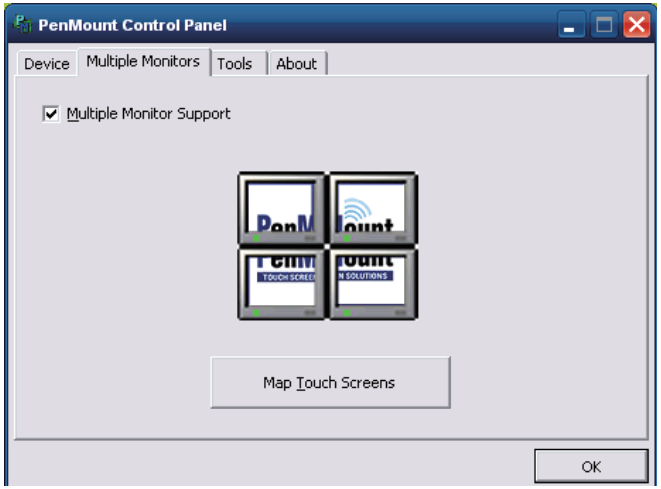

Product Warranty

January 2014

All Cimon products including hardware, software, and firmware *(collectively called “Products”)* carry a **one-year warranty** against defects in materials and workmanship beginning from the date of product receipt from seller or its appointed distributor. If a product proves defective in materials and workmanship within one year from the date of purchase, we will replace or repair it. **Products returned under warranty after 30 days may be replaced with refurbished or remanufactured goods at Cimon’s discretion.** Cimon makes no representation or warranty, express or implied, that the operation of the Products will be uninterrupted or error free, or that the functions contained therein will meet or satisfy buyer’s intended use or requirements. **Repaired or replaced Products provided as a result of this warranty are warranted for a period of six (6) months from the shipment to buyer or the remainder of the original warranty term for that particular product, whichever is longer.** Cimon’s standard policy is that all customers are responsible for freight charges to Cimon when returning products under the warranty return policy.

This warranty will be void if Products date codes or serial numbers are removed or defaced. Warranties do not apply to products that have been subjected to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized repair, misuse, neglect, accident, alteration, improper installation or other acts which are not the fault of Cimon, including damage caused in shipping. Our warranty also does not apply to any product that has been damaged by external causes such as fire, flood, sand, dirt, lightning, acts of God, battery leakage, theft, blown fuses, improper use of any electrical source or connection to product not recommended in writing for interconnection by Cimon.

In no event will Cimon be liable, whether in contract, tort or under any other legal theory, for lost profits or revenues, loss of use or similar economic loss, for any indirect, special, incidental, consequential, punitive or similar damages arising out of or in connection with any products including non-conforming products, or for any third party claims against you relating to the products, even if we have been advised of the possibility of such claim. **In no event will our monetary liability in respect of any product exceed the purchase price that you paid for it.**

To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to are and usually change with time. It is your responsibility to determine which codes should be followed, and to verify that the equipment, installation and operation is in compliance with the latest revision of these codes.

Product Warranty

CIMON SOFTWARE AND HARDWARE (COLLECTIVELY REFFERED TO AS, “PRODUCTS”) LICENSE DISCLAIMER AND LIMITATION OF WARRANTIES

YOUR USE OF ANY CIMON PRODUCTS AND CONTENT ACCESSIBLE THROUGH THE PRODUCTS IS ENTIRELY AT YOUR OWN RISK. EXCEPT AS DESCRIBED IN THIS AGREEMENT, THE PRODUCTS ARE PROVIDED "AS IS." TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, CIMON, ITS AFFILIATES, AND ITS THIRD PARTY SERVICE OR DATA PROVIDERS, LICENSORS, DISTRIBUTORS OR SUPPLIERS (COLLECTIVELY REFERRED TO AS, "SUPPLIERS") DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY THAT THE PRODUCTS ARE FIT FOR A PARTICULAR PURPOSE, TITLE, MERCHANTABILITY, DATA LOSS, NON-INTERFERENCE WITH OR NON-INFRINGEMENT OF ANY INTELLECTUAL PROPERTY RIGHTS, OR THE ACCURACY, RELIABILITY, QUALITY OR CONTENT IN OR LINKED TO THE PRODUCTS.

CIMON AND ITS AFFILIATES AND SUPPLIERS DO NOT WARRANT THAT THE PRODUCTS ARE SECURE, FREE FROM BUGS, VIRUSES, INTERRUPTION, ERRORS, THEFT OR DESTRUCTION. FURTHER, CIMON DOES NOT WARRANT ACCESS TO THE INTERNET OR TO ANY OTHER SERVICE, CONTENT OR DATA TRANSMITTED THROUGH THE PRODUCTS. IF THE EXCLUSIONS FOR IMPLIED WARRANTIES DO NOT APPLY TO YOU, ANY IMPLIED WARRANTIES ARE LIMITED TO 60 DAYS FROM THE DATE OF PURCHASE OR DELIVERY OF THE PRODUCTS, WHICHEVER IS SOONER.

EQUIPMENT DAMAGE OR SERIOUS INJURY TO PERSONNEL INCLUDING DEATH CAN RESULT FROM THE FAILURE TO FOLLOW ALL APPLICABLE CODES AND STANDARDS INCLUDING ENGINEERING STANDARDS. CIMON DOES NOT ASSUME ANY RESPONSIBILITY FOR YOUR PRODUCT DESIGN, INSTALLATION OR OPERATION.

CIMON LTD AND ITS AFFILIATES AND SUPPLIERS DISCLAIM ANY REP-RESENTATIONS OR WARRANTIES THAT YOUR USE OF THE PRODUCTS WILL SATISFY OR ENSURE COMPLIANCE WITH ANY LEGAL OBLIGATIONS OR LAWS OR REGULATIONS.

LIMITATION OF LIABILITY AND INDEMNITY. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE ENTIRE LIABILITY OF CIMON, AND ITS AFFILIATES AND SUPPLIERS FOR ALL MATTERS OR CLAIMS RELATING TO THIS AGREEMENT SHALL BE LIMITED TO THE AMOUNT YOU PAID FOR THE PRODUCTS DURING THE TWELVE (12) MONTHS PRIOR TO SUCH CLAIM.

THE STATUTE OF LIMITATIONS FOR FILING A CLAIM SHALL BE LIMITED TO THE SHORTER OF TWELVE MONTHS, OR THE SHORTEST PERIOD ALLOWED UNDER APPLICABLE LAW.

Product Warranty

SUBJECT TO APPLICABLE LAW, CIMON AND ITS AFFILIATES AND SUPPLIERS ARE NOT LIABLE FOR ANY OF THE FOLLOWING: (A) INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES; (B) DAMAGES RELATING TO FAILURES OF TELECOMMUNICATIONS, THE INTERNET, ELECTRONIC COMMUNICATIONS, CORRUPTION, SECURITY, LOSS OR THEFT OF DATA, VIRUSES, SPYWARE, LOSS OF BUSINESS, REVENUE, PROFITS OR INVESTMENT, OR USE OF SOFTWARE OR HARDWARE THAT DOES NOT MEET CIMON SYSTEM REQUIREMENTS. THE ABOVE LIMITATIONS APPLY EVEN IF CIMON AND ITS AFFILIATES AND SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND/OR THE POSSIBILITY OF DAMAGES GREATER THAN THE LIMITATION ABOVE. THIS AGREEMENT SETS FORTH THE ENTIRE LIABILITY OF CIMON, ITS AFFILIATES AND YOUR EXCLUSIVE REMEDY WITH RESPECT TO THE SOFTWARE AND ITS USE.

THE PARTIES FURTHER AGREE THAT THE APPLICABLE LAW AND VENUE FOR ANY DISPUTED ARE THE LAWS OF CALIFORNIA. TO THE EXTENT ALLOWED BY APPLICABLE LAW, ANY CLAIMS SHALL BE BROUGHT IN LOS ANGELES CALIFORNIA AND CALIFORNIA LAW SHALL APPLY. THE CALIFORNIA VERSION OF THE UCC IS THE PREFERRED LAW TO BE APPLIED TO ANY WARRANT AND RELATED CLAIMS.

MEMO

MEMO

MEMO

MEMO

CIMON CO.,LTD.

H.Q Address : 5F KDT B/D, #48, Beolmal-ro, Bundang-gu,Seongnam-si, GyeongGi-do, Korea, 463-836
Tel : +82-31-778-3071

USA : 3699 Wilshire Blvd suite 1250 Los Angeles CA90010
Tel : 213 384-8703
Homepage : www.cimon.com

Version: 1.2
Revision Date : Aug, 2015
Printed : Apr, 2015
BNT21025